

INSTRUCTIONS TO INSTALL SD CARD WITH NEW PRODUCTIONS



1—Turn power switch off.

2—Remove existing SD Card (if installed). It is located on the right side of the unit. Pushing the card inward releases the card from its locked position.

3—Plug in new card. On older models (16mb), the copper contacts face up and go in slot first. On newer models (64mb) the copper contacts face down and go in first. If the card does not begin to insert easily, turn it over and try the other side. **(Note: Most units are the newer 64MB style. To determine which model you have, look at the space immediately below the LCD display. 64MB units will be labeled as such, whereas the 16MB units will be blank).**

4—Turn power switch back on. The unit will self-initialize and start playing in a few moments. Note that on the LCD display in the top right corner will be the symbol of an “SD Card” and then below see “**Int 64Mb**” or “**Int 16Mb**” (meaning the internal memory size is 64mb or Int 16Mb) and below that “**Ext 1.0 Gb**” (meaning the SD card size is 1 gb, or whatever size card was plugged in). If the unit does not play, make sure that the display is showing some amount of memory on the **Ext** line. If it shows ‘0’, then repeat steps 1-4 above making sure that the card is properly seated.

5—See “Instructions for Switching Productions” for setting production to play, repeat mode and volume.